


Power Cycle Instructions

Toner for use in Sharp MX-60/MX-61-series Multi-Functional Devices

Please follow these if machine ejects toner cartridges after toner cartridge access cover is closed.



1. Open the toner cartridge access cover

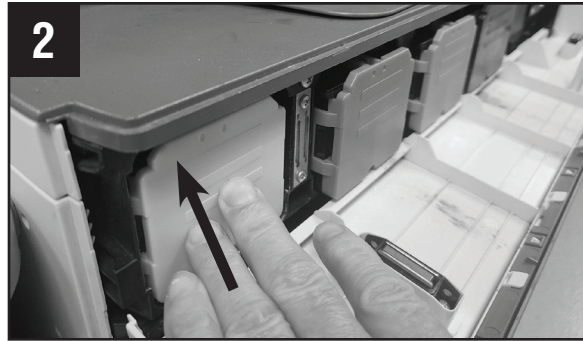

2. Push all four cartridges securely into the machine



3. Power off the machine by pressing power button
(located just above touchscreen in the upper right corner)



4. Close the toner cartridge access cover



5. Power on the machine by pressing power button