



# Refill Instructions

***Katun Developer for use in  
Canon iR Advance C 5030 / C 5035 / C 5235 /  
C 5240 / C 5045 / C 5051 / C 5250 / C 5255 MFPs***


Instructions relatives au reconditionnement  
Anweisungen zur Grunderneuerung  
Istruzioni di ricondizionamento  
Instruções de reconstrução  
Instrucciones de reconstrucción

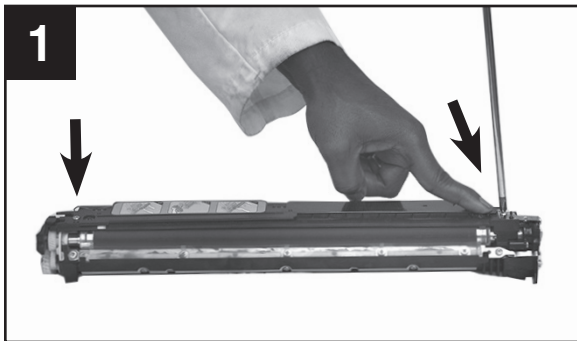


Disassemble developer unit by removing two screws from top of unit.

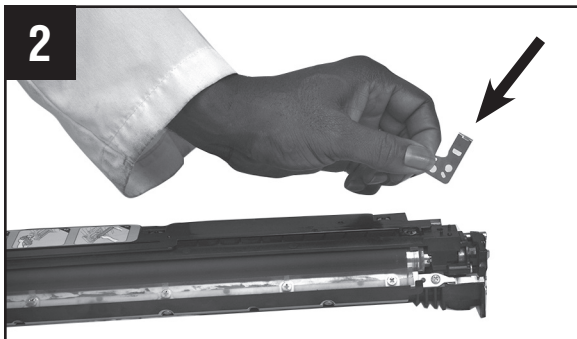

Remove ground plate after removing the screw securing it to the developer unit.

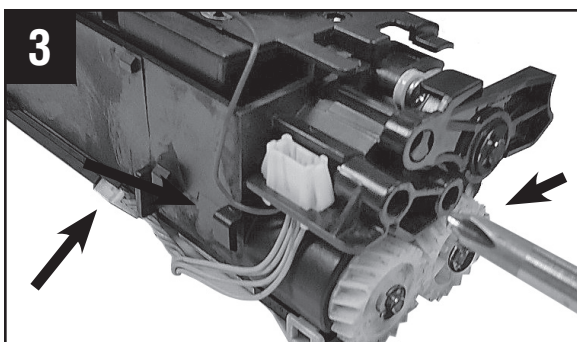


Remove connector bracket by removing screw;  
unplug flat white connector from the back of the lower unit.

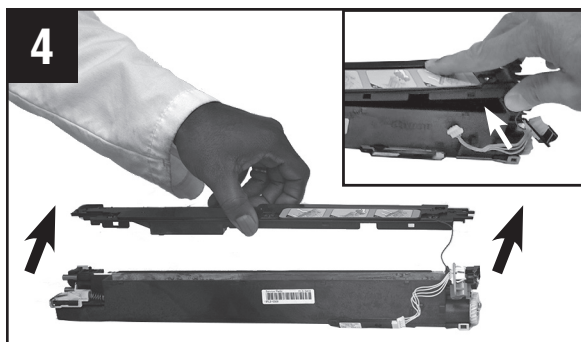


Remove cover plate by unsnapping clips along back of cover plate and lifting and loosening from ends.




Pour used developer from developer unit into waste bag and dispose properly in accordance with local regulations (bag not included with Katun developer).

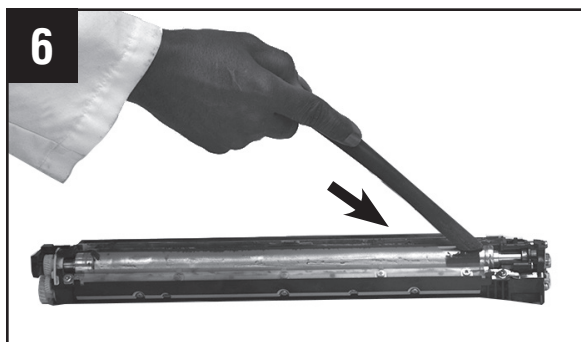


Remove all remaining residual developer from unit using a vacuum cleaner.

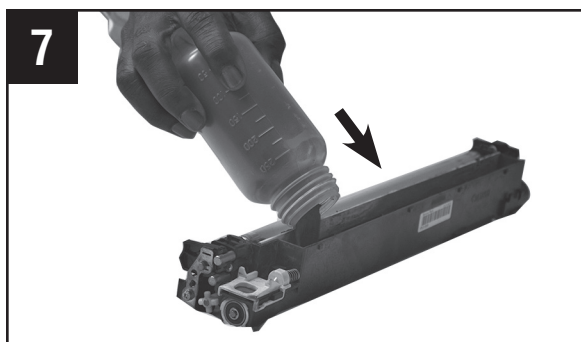


Pour new Katun developer into the developer unit, spreading the developer evenly across the length of the developer roller.

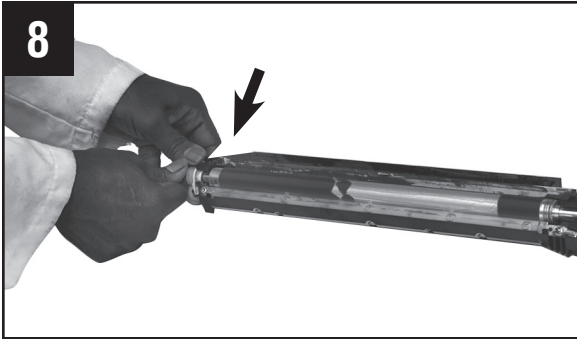


Rotate the developer roller to ensure even distribution of the developer on the surface of the developer roller.

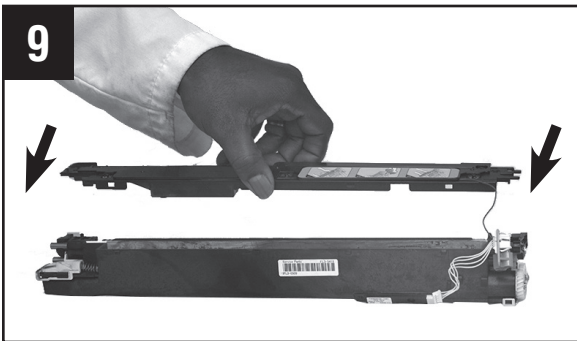

Replace cover plate by lining up tab grooves and snapping tabs into place.

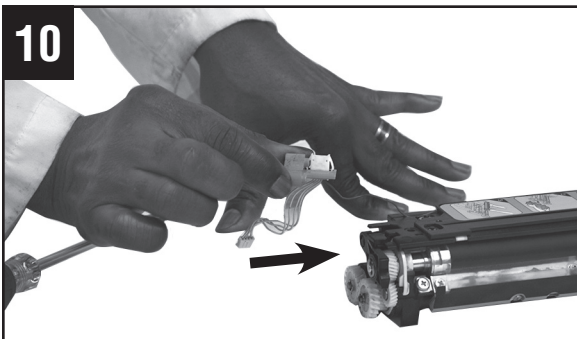

Reconnect white connector and reinstall connector bracket with screw.

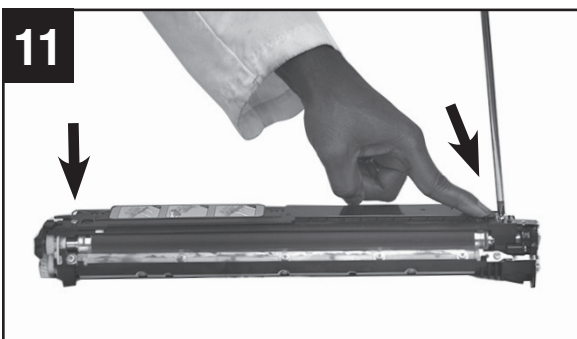

Re-position ground plate, making sure it makes proper contact with developer unit ground plate, then secure with previously removed screw.

Reassemble developer unit using screws previously removed.

**Note:** When complete, follow the OEM recommended procedure for replacement of a new developer unit.